


HOME DECORATORS COLLECTION

INV# 23112

SK17013B SHUTTER 3PC BASKET 9"Hx12"Wx15"D













ASSEMBLY INSTRUCTIONS

Made In China

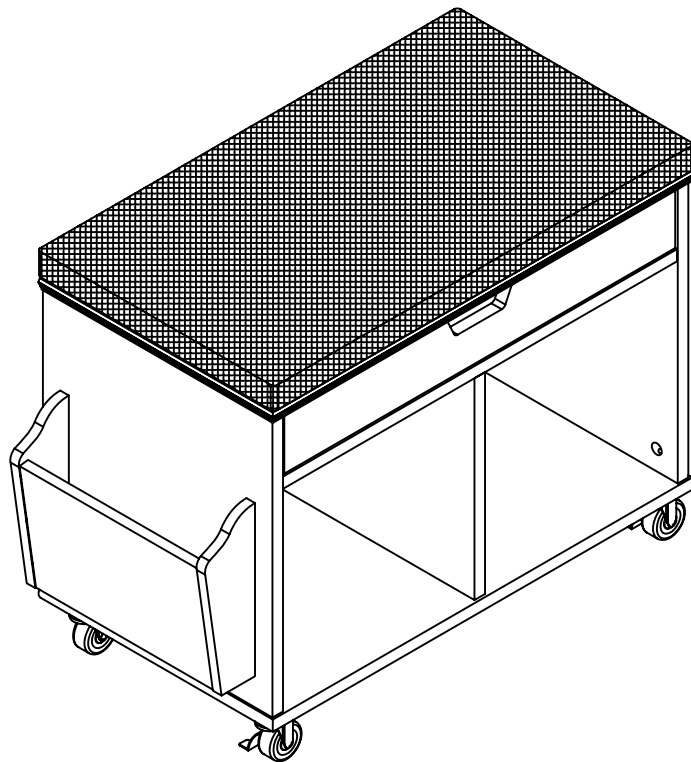


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

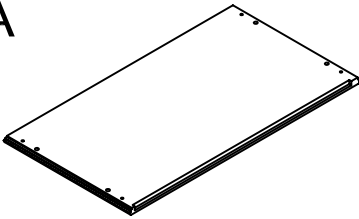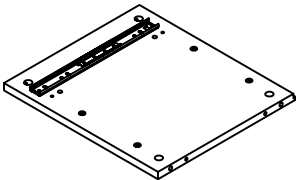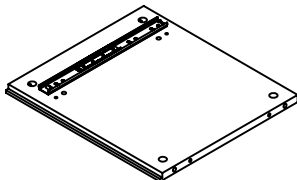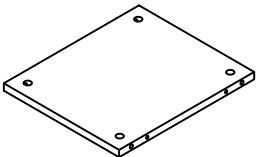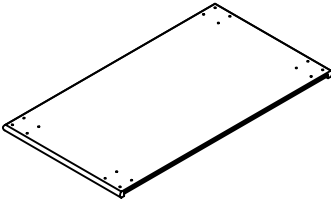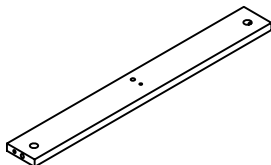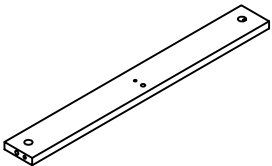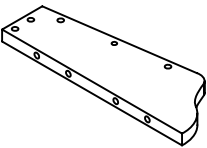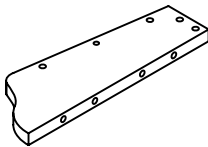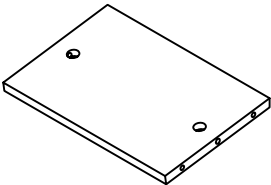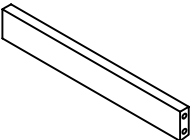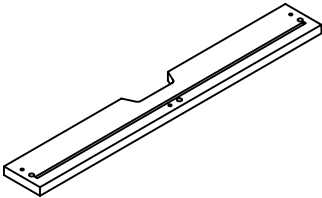
PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  MIDDLE PANEL-1PC	E  BOTTOM PANEL-1PC	F  FRONT FIXED PANEL-1PC
G  BACK FIXED PANEL-1PC	H  MAGAZINE RACK LEFT SIDE PANEL-1PC	I  MAGAZINE RACK RIGHT SIDE PANEL-1PC
J  MAGAZINE RACK FRONT PANEL-1PC	K  MAGAZINE RACK BOTTOM PANEL-1PC	L  DRAWER FRONT PANEL-1PC

M

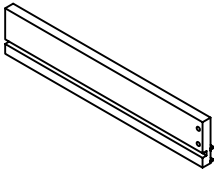


DRAWER
LEFT SIDE PANEL-1PC

N

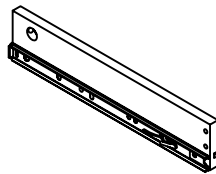


DRAWER
RIGHT SIDE PANEL-1PC

O

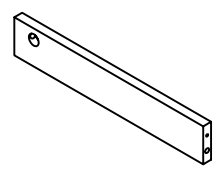


DRAWER
BOTTOM SUPPORT-1PC

P

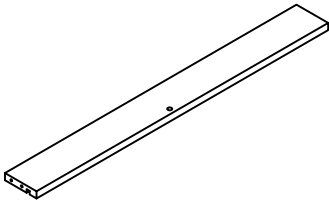


DRAWER
BACK PANEL-1PC

Q

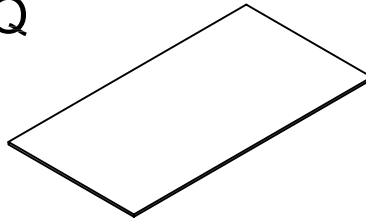


DRAWER
BOTTOM PANEL-1PC

R

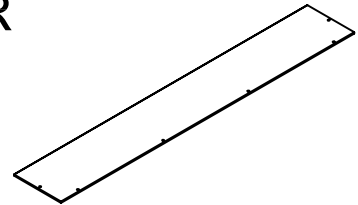


UP BACK PANEL-1PC

S

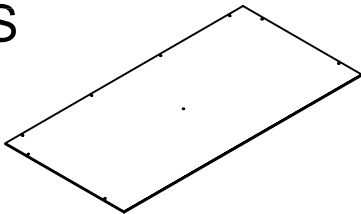










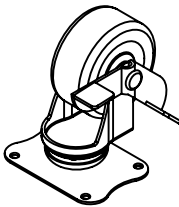


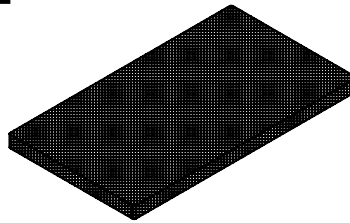DOWN BACK PANEL-1PC

T




CUSHION-1PC

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE


<p>a</p>  <p>WOOD DOWEL-32PCS</p>	<p>b</p>  <p>CAM LOCK BOLT-21PCS</p>	<p>c</p>  <p>CAM LOCK-21PCS</p>
<p>d</p>  <p>LONG PLASTIC COVER-8PCS</p>	<p>e</p>  <p>SHORT PLASTIC COVER-2PCS</p>	<p>f</p>  <p>1" FLAT HEAD SCREW-5PCS</p>
<p>g</p>  <p>ROUND HEAD SCREW-18PCS</p>	<p>h</p>  <p>METAL PLATE-3PCS</p>	<p>i</p>  <p>5/8" FLAT HEAD SCREW-16PCS</p>
<p>j</p>  <p>UNIVERSAL WHEEL(1)-2PCS</p>	<p>k</p>  <p>UNIVERSAL WHEEL(2)-2PCS</p>	<p>l</p>  <p>BOLT-4PCS</p>
<p>NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE</p>		

HOW TO SEPARATE GLIDES

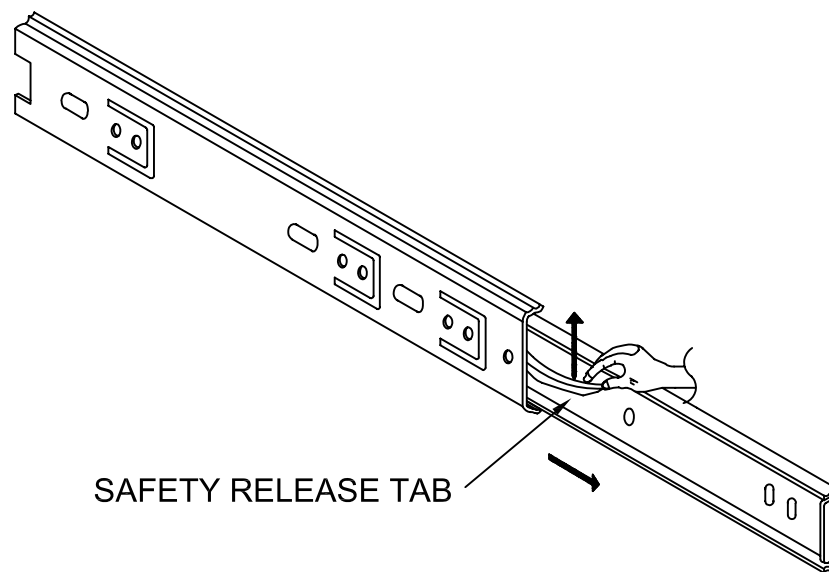


PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDES.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

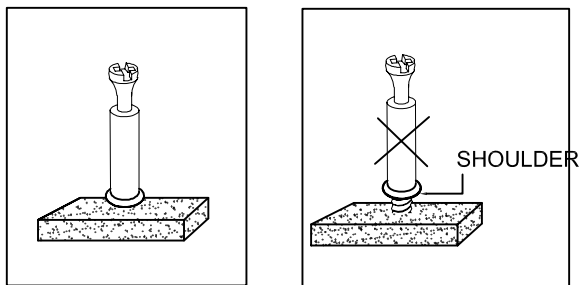


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

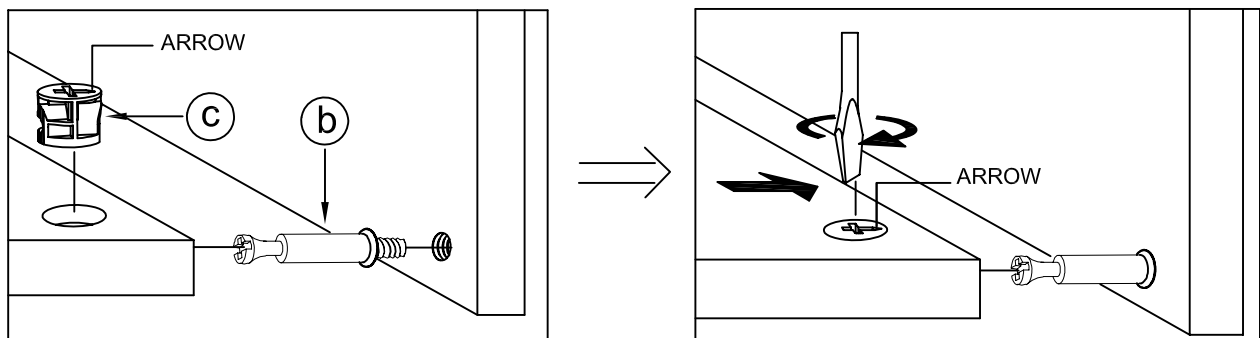


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

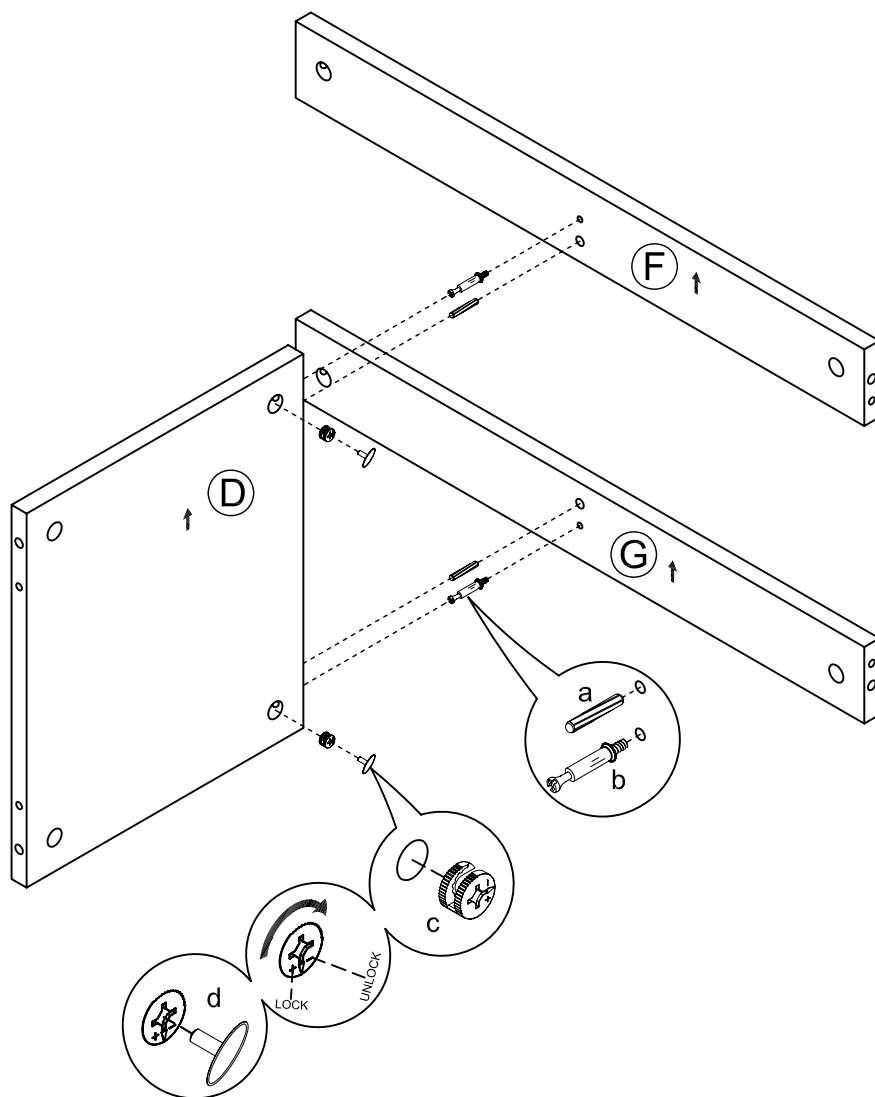


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE FRONT FIXED PANEL (F) AND THE BACK FIXED PANEL (G).
- JOIN THE FRONT FIXED PANEL (F) AND THE BACK FIXED PANEL (G) TO THE MIDDLE PANEL (D) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH LONG PLASTIC COVER (d).

FIG 2

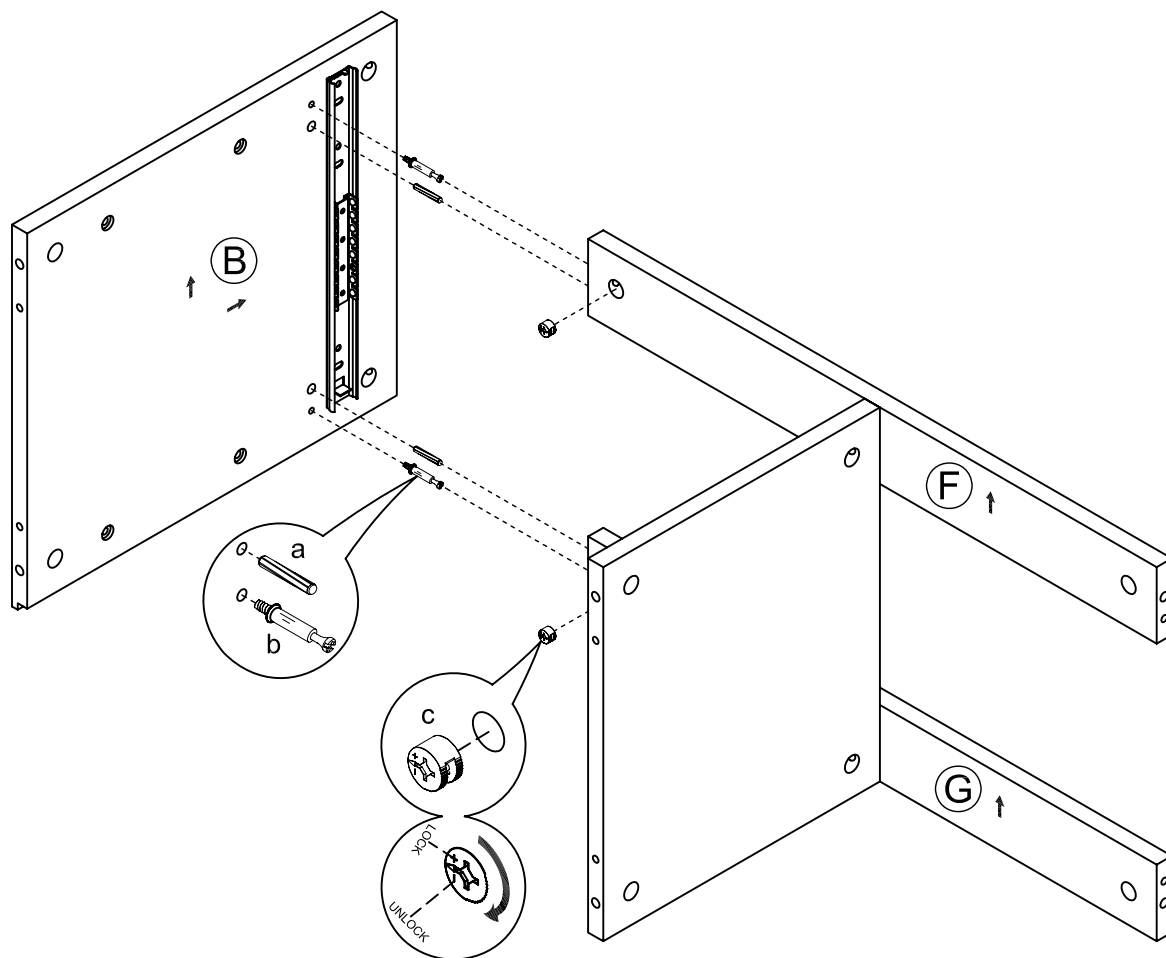


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (B).
- JOIN THE LEFT SIDE PANEL (B) TO THE FRONT FIXED PANEL (F) AND THE BACK FIXED PANEL (G) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 3

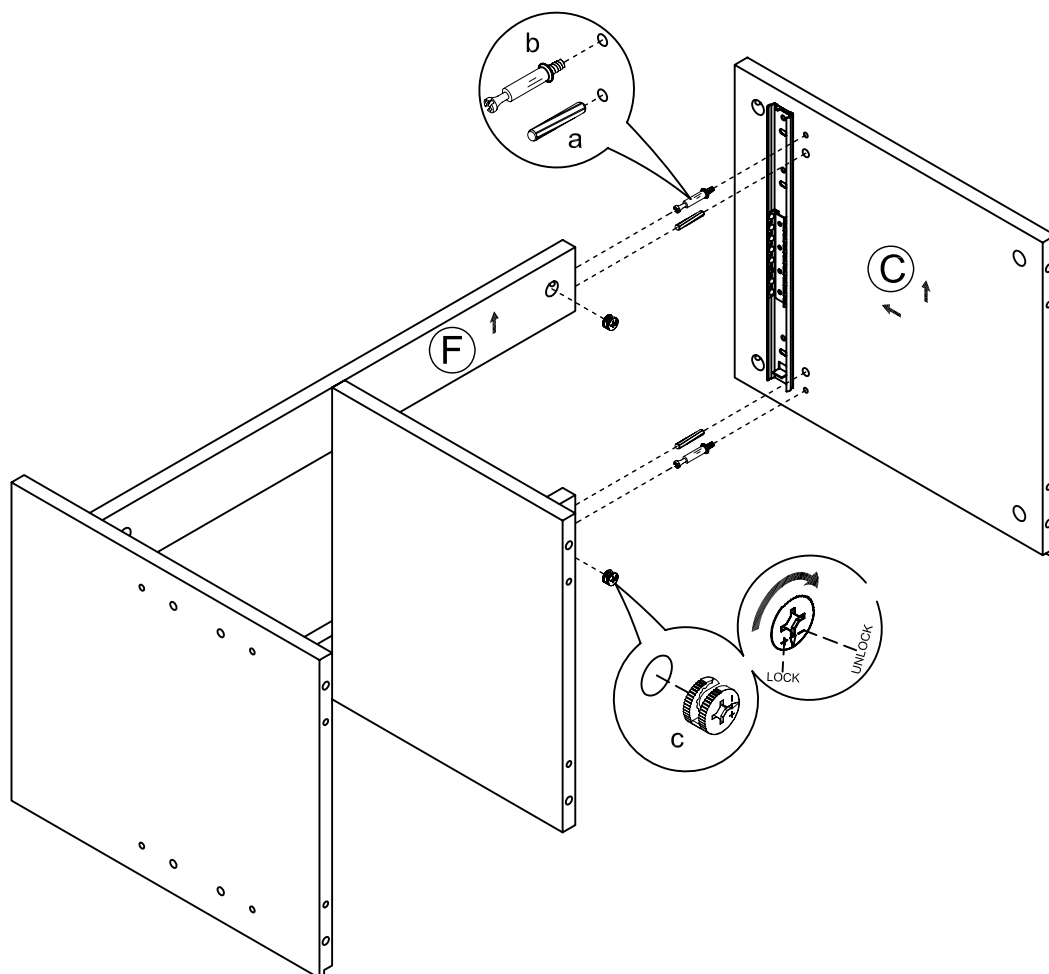


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE RIGHT SIDE PANEL (C).
- JOIN THE RIGHT SIDE PANEL (C) TO THE FRONT FIXED PANEL (F) AND THE BACK FIXED PANEL (G) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 4

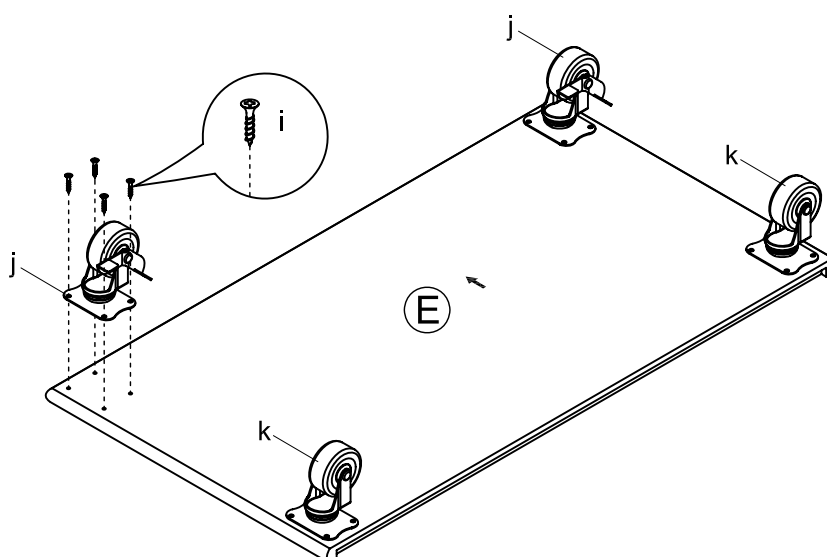


- JOIN THE UNIVERSAL WHEEL (j & k) TO THE BOTTOM PANEL (E)
BY USING 5/8" FLAT HEAD SCREW (i) FIRST.

FIG 5

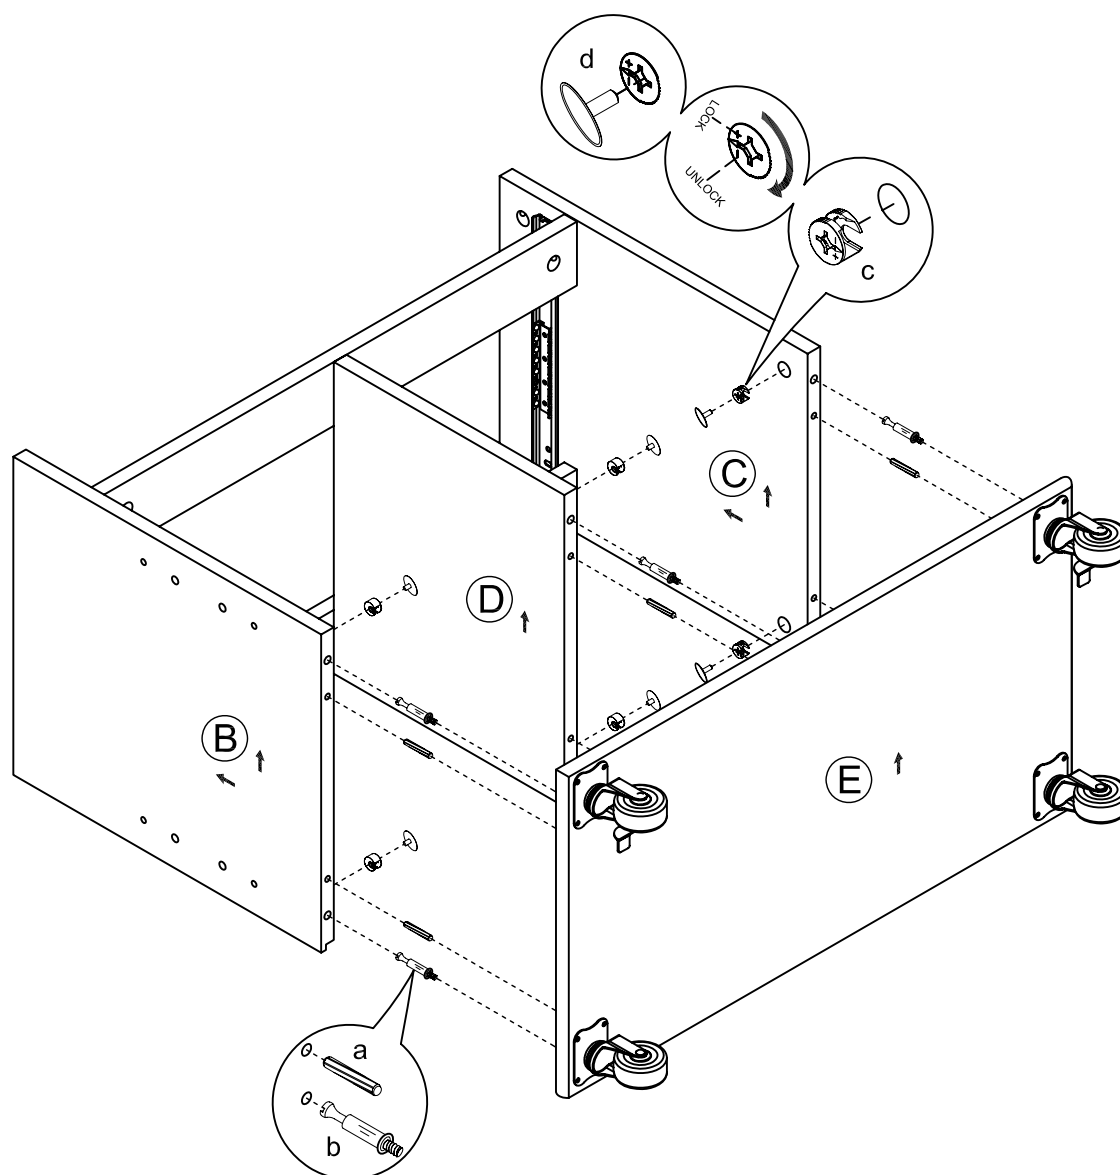


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (E).
- JOIN THE BOTTOM PANEL (E) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH LONG PLASTIC COVER (d).

FIG 6

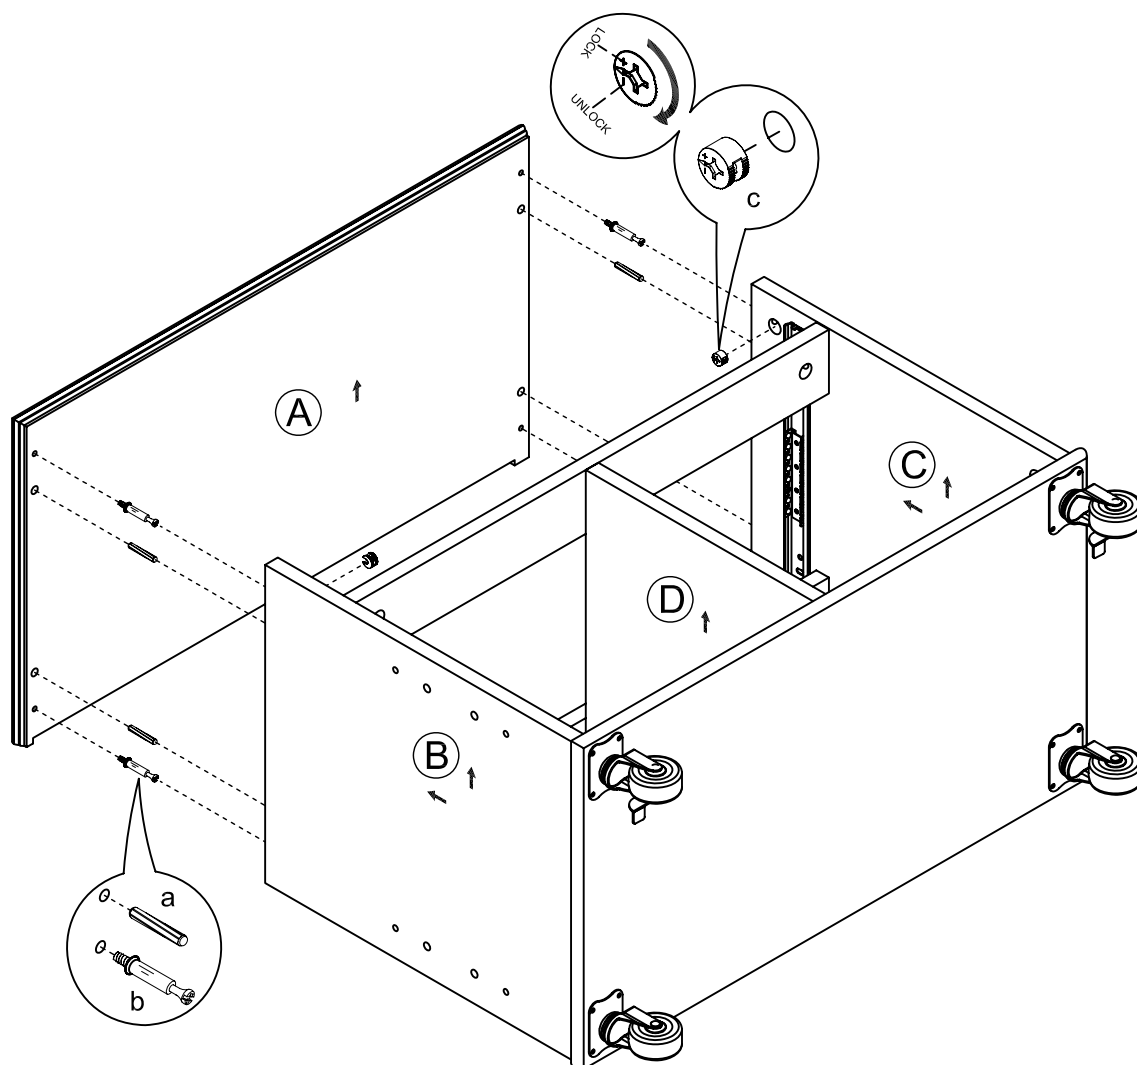


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 7

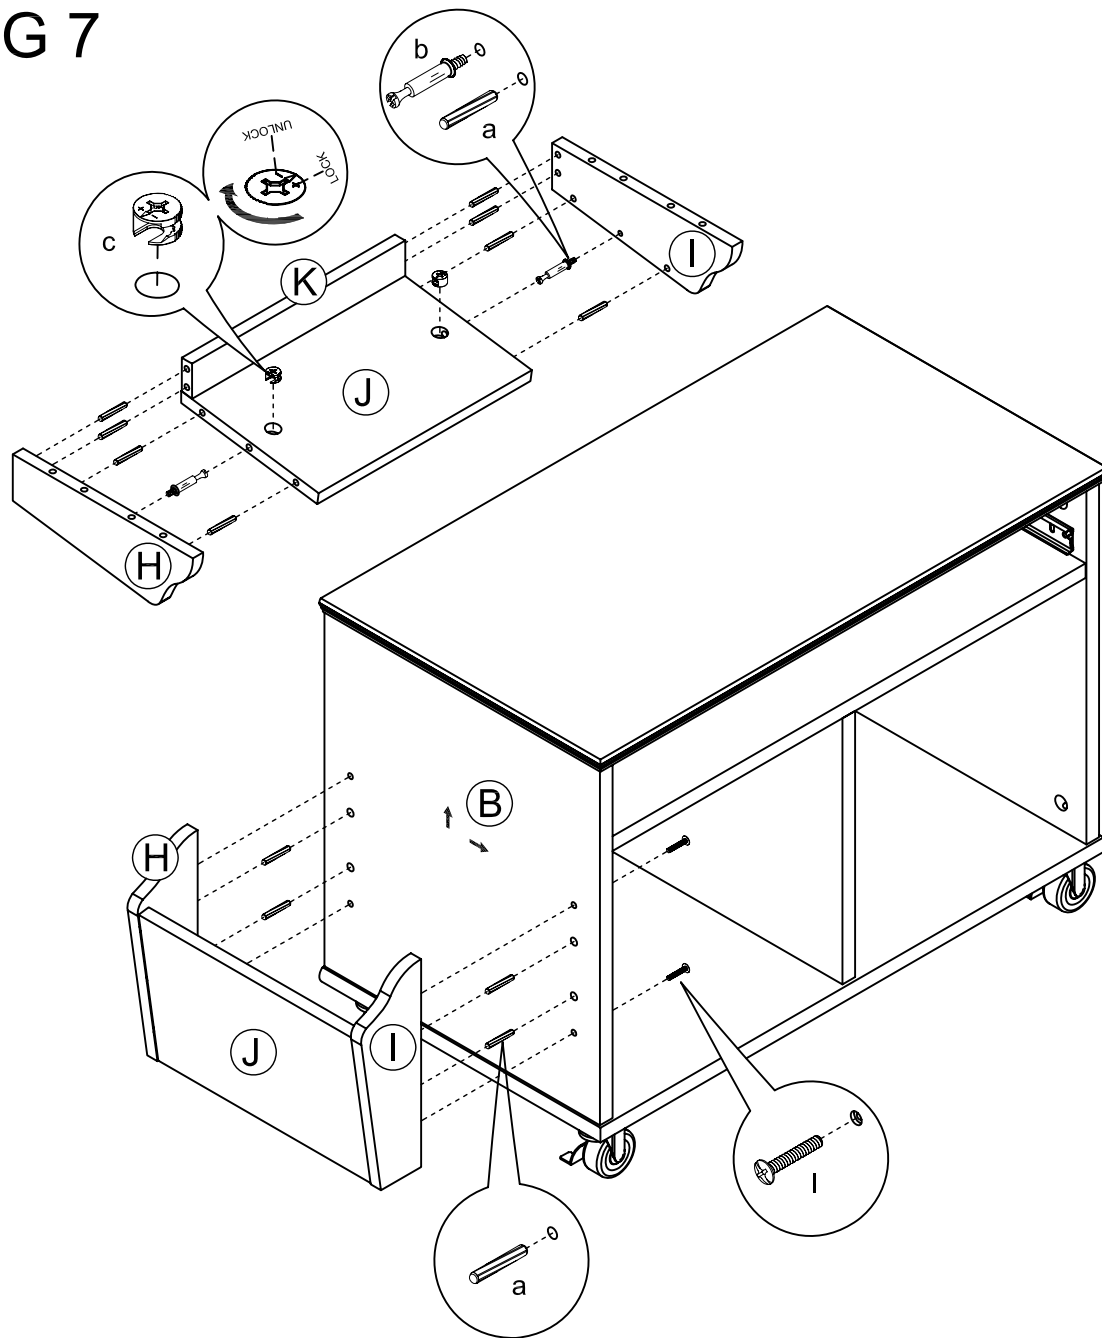


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE MAGAZINE RACK LEFT SIDE PANEL (H) AND THE MAGAZINE RACK RIGHT SIDE PANEL (I).
- JOIN THE MAGAZINE RACK LEFT SIDE PANEL (H) AND THE MAGAZINE RACK RIGHT SIDE PANEL (I) TO THE MAGAZINE RACK FRONT PANEL (J) AND THE MAGAZINE RACK BOTTOM PANEL (K) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- INSTALL THE WOOD DOWEL (a) INTO THE MAGAZINE RACK LEFT SIDE PANEL (H) AND THE MAGAZINE RACK RIGHT SIDE PANEL (I).
- JOIN THE ASSEMBLED MAGAZINE RACK PART TO THE LEFT SIDE PANEL (B) BY USING BOLT (l) FIRST.

FIG 8

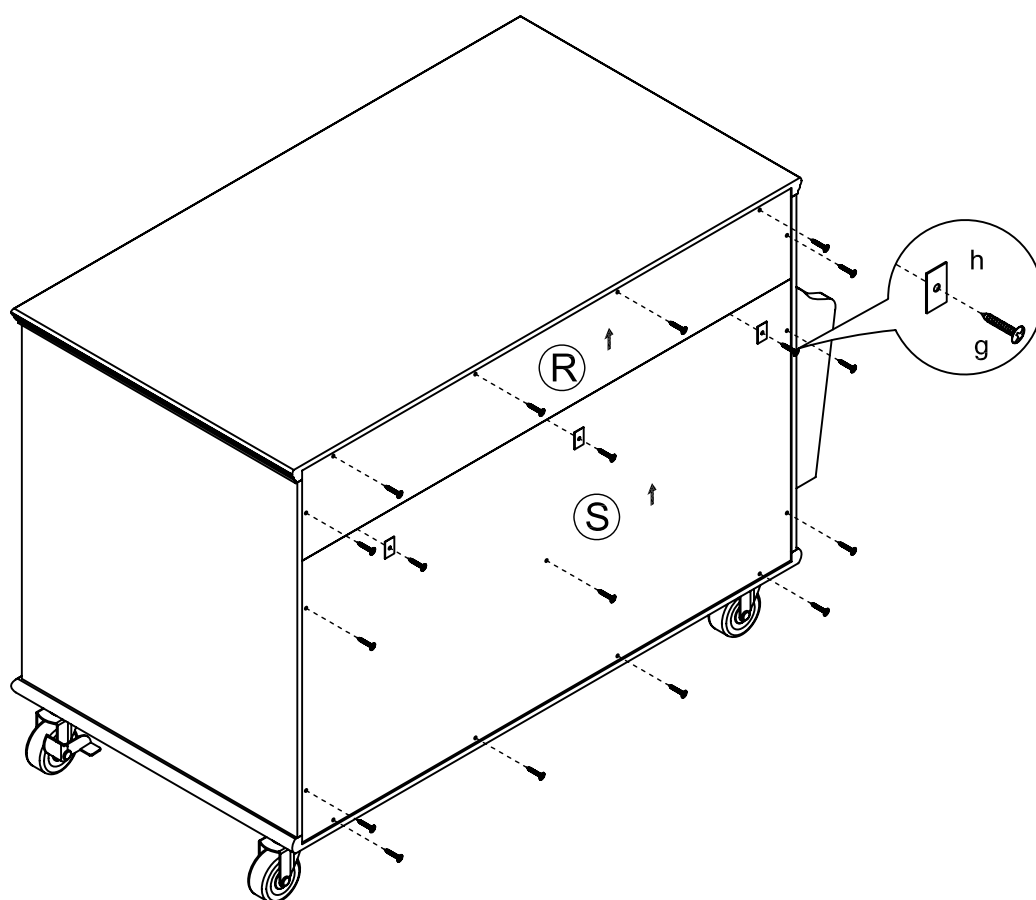


- TIGHTEN THE UP BACK PANEL (R) AND THE DOWN BACK PANEL (S)
BY USING THE 5/8" ROUND HEAD SCREW (g) AND THE METAL PLATE (h).

FIG 9

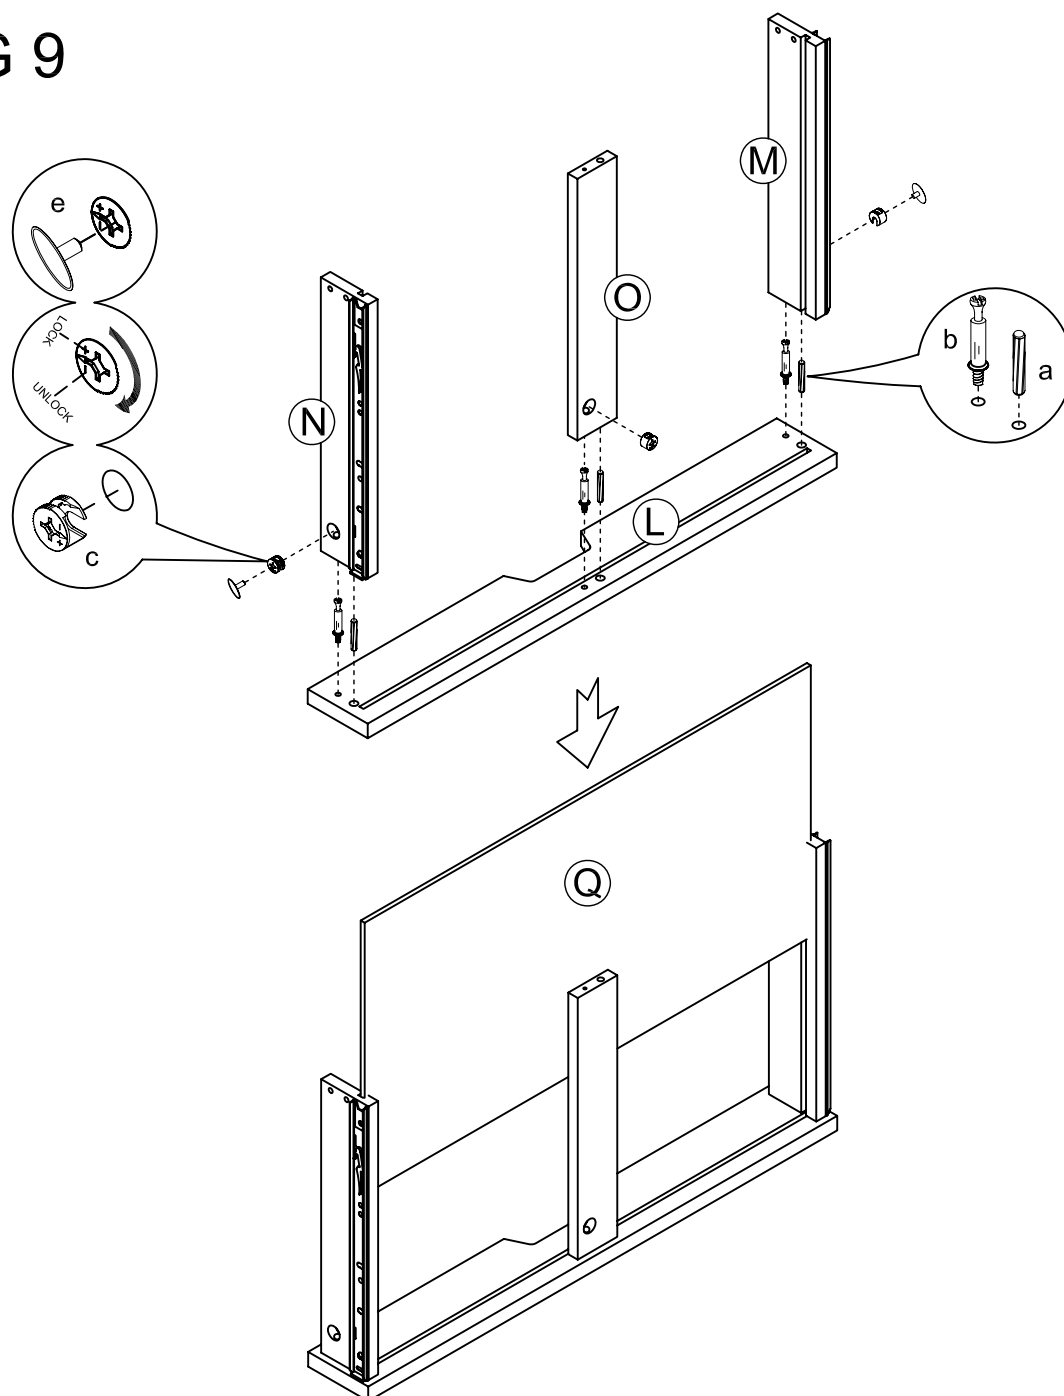


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE DRAWER FRONT PANEL (L).
- JOIN THE DRAWER LEFT SIDE PANEL (M) AND THE DRAWER RIGHT SIDE PANEL (N), DRAWER BOTTOM SUPPORT (O) TO THE DRAWER FRONT PANEL (L).
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO THE CAM LOCK BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE SHORT PLASTIC COVER (e).
- SLIDE THE DRAWER BOTTOM PANEL (Q) INTO THE GROOVES ON THE DRAWER LEFT SIDE PANEL (M) AND THE DRAWER RIGHT SIDE PANEL (N).

FIG 10

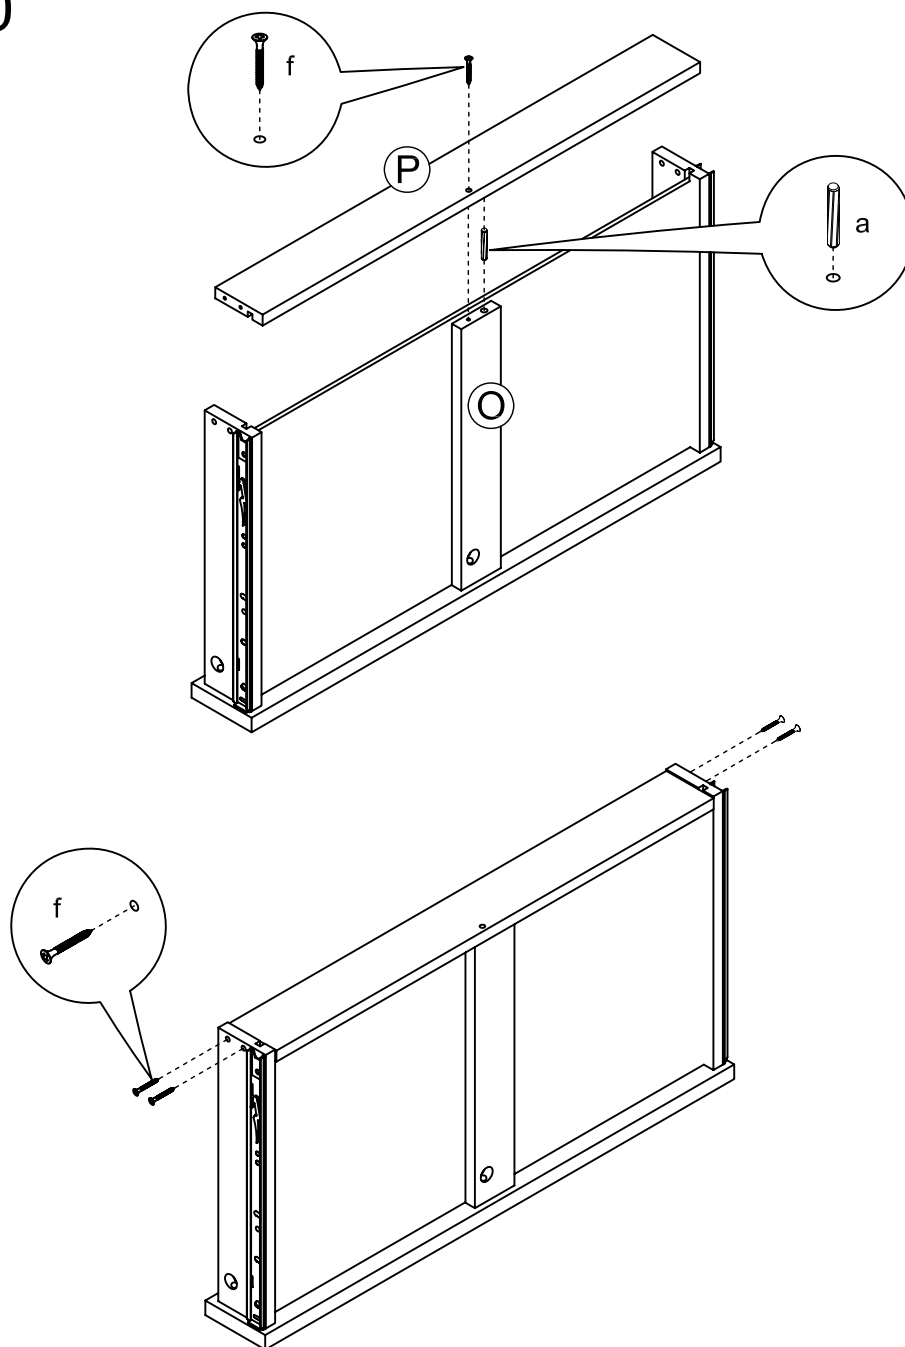

- INSTALL THE WOOD DOWEL (a) INTO THE DRAWER BOTTOM SUPPORT (O)
- JOIN THE DRAWER BACK PANEL (P) TO THE ASSEMBLED DRAWER PART AND TIGHTEN THE DRAWER BACK PANEL (P) BY USING THE 1" FLAT HEAD SCREW (f) THROUGH PRE-DRILLED HOLES ON DRAWER SIDE PANELS.
- TIGHTEN THE DRAWER BOTTOM SUPPORT (O) BY USING THE 1" FLAT HEAD SCREW (f) THROUGH PRE-DRILLED HOLES ON THE DRAWER BACK PANEL (P).

FIG 11

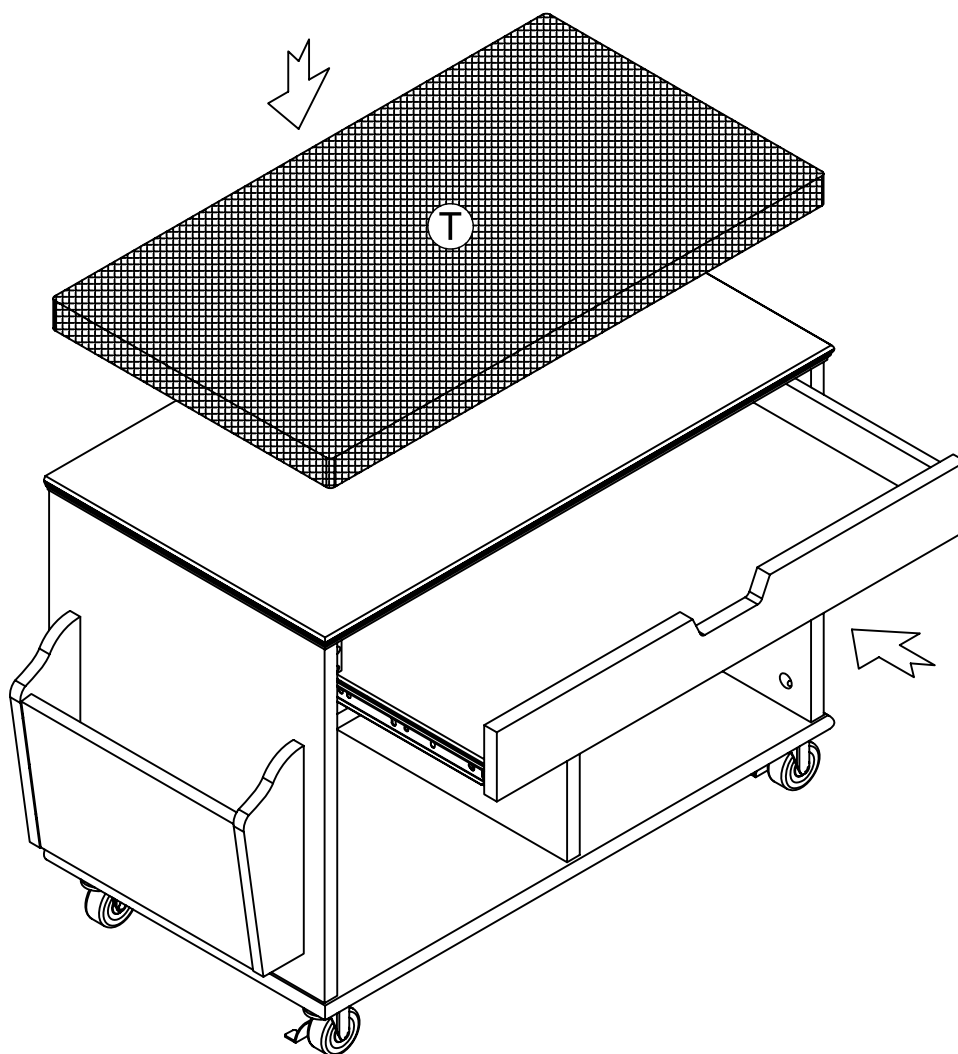

- INSERT DRAWERS INTO THE ASSEMBLED PART.
- PLACE THE CUSHION (T) ABOVE THE TOP PANEL (A).